

11 easy steps to update SpeedNavi SQ™ for gogopal (Version 3.1.0.22)

Note: Please use Microsoft Internet Explorer.

Step 1: Download the SpeedNavi application file from the links below:

[Gogopal Q5.0](#)

www.gogopal.com.sg/downloads/SpeedNavi_GOGOPAL_Q4.3_2011S_NEWSETTINGS.zip

[Gogopal Q4.3](#)

www.gogopal.com.sg/downloads/SpeedNavi_GOGOPAL_Q4.3_2011S_NEWSETTINGS.zip

[Gogopal M38](#)

www.gogopal.com.sg/downloads/SpeedNavi_GOGOPAL_M38_2011S.zip

Step 2: Unzip the file and copy the contents onto your SD/MicroSD card located in your gogopal device. You may either use the USB cable provided with your gogopal to transfer the files directly to the SD/MicroSD card, or use a SD card reader.

Note 1: If there is a previous SpeedNavi folder on your SD/MicroSD card, please back-up the whole folder in your computer. After that, you may delete the SpeedNavi folder to free up enough space on your SD/MicroSD card to copy the contents from the zip file.

Note 2: If you are using the gogopal M38, you may need to purchase a new SD card with 2GB capacity. The 512MB SD card that comes standard with your gogopal M38 is not large enough to store SpeedNavi version 3.1.0.22.

Step 3: Use **Internet Explorer** to visit <http://www.speednavi.com/?N=MY&L=EN>

Note: We cannot guarantee that the following steps will work if you do not use Internet Explorer. Please use Internet Explorer for maximum compatibility.

Step 4: Login to your account by clicking the “LOGIN” button at the top right corner. Please make sure that Malaysia is selected.



Step 5:

Key in your ID and password.

If you are using gogopal Q5.0 or Q4.3, your ID and password may follow the following format.

If not, please email customercare@gogopal.com.sg with your H/W key details to request for your ID and password. You may need to copy the downloaded file to the SD/MicroSD card, start your gogopal device and click on “Navigation” to see your H/W key.

gogopal Q5.0

ID: GGP50xxx

Password: GGP50xxx *(same as ID)*

xxx is the last 3 digits of your gogopal’s serial number located on the back of your device.



gogopal Q4.3

ID: GGP43xxx

Password: GGP43xxx *(same as ID)*


xxx is the last 3 digits of your gogopal’s serial number located on the back of your device.




If you are using the gogopal M38, please email customercare@gogopal.com.sg with your H/W key details to request for your ID and password. You may need to copy the downloaded file to the SD/MicroSD card, start your gogopal device and click on “Navigation” to see your H/W key.


Step 6: Click “MY SPEEDNAVI”, and then click “MY HISTORY”.

Note: Please ensure that Malaysia is selected on the upper right corner of the webpage.

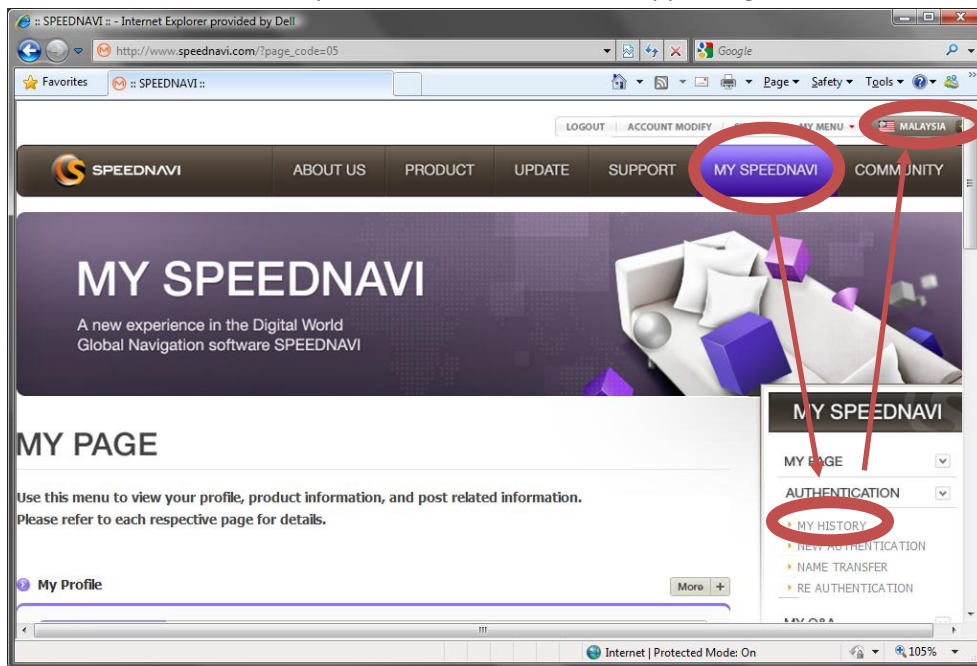


Step 7: Click on the “FREE” button circled below.


Note: If you are using a gogopal that is more than 1 year old, you may have a “PAY” button which looks like this:  Please email customer@gogopal.com.sg if this occurs, or you may purchase a map update [here](#).

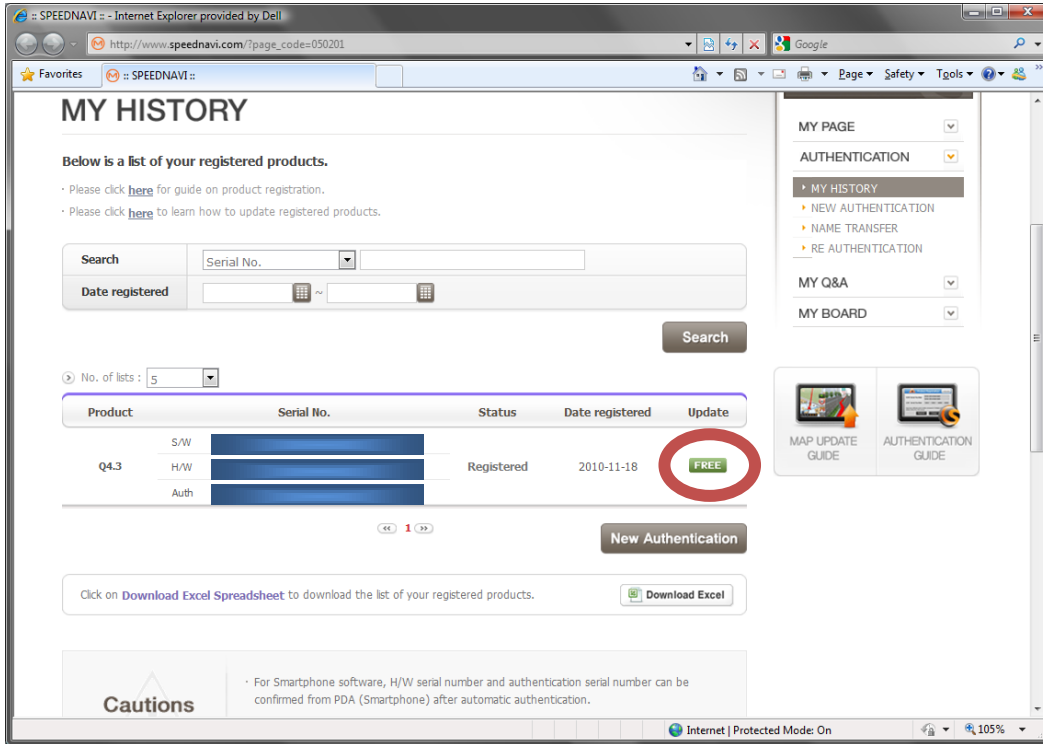



Step 8: Click “Confirm”.

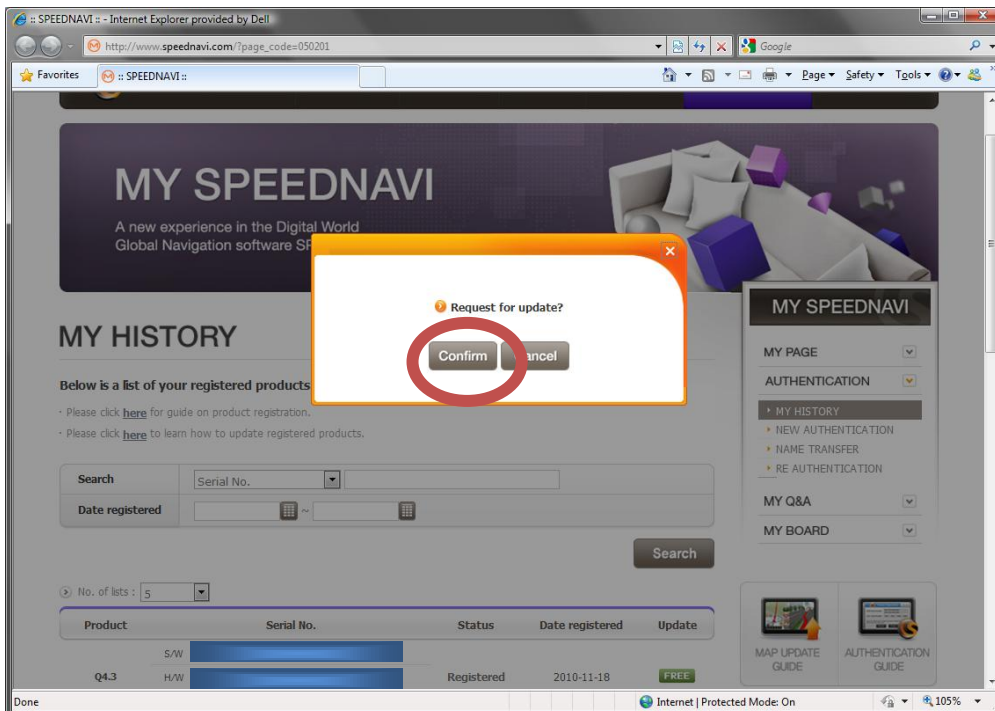

Step 9: Click on the button circled below.

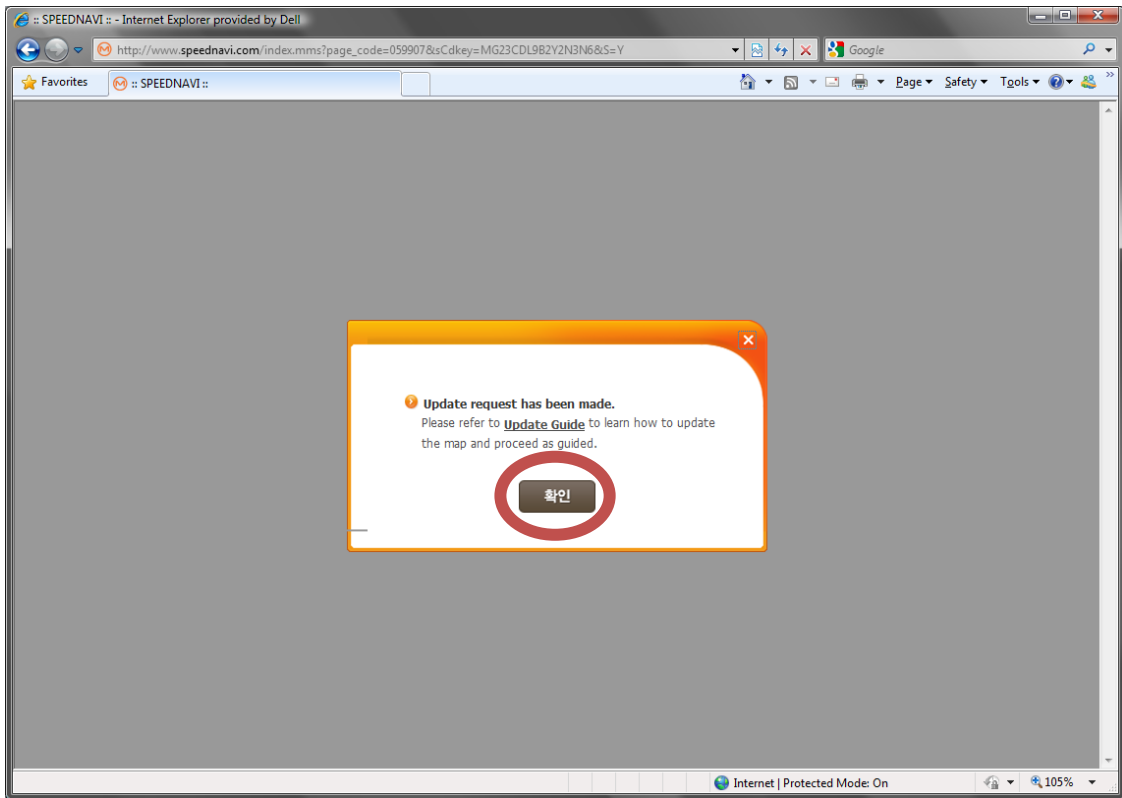

Step 10: Key in the Software serial number and the Authentication serial number into your gogopal device. (you may need to start your gogopal device and click on “Navigation”)

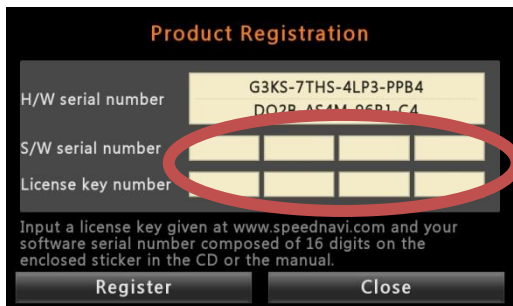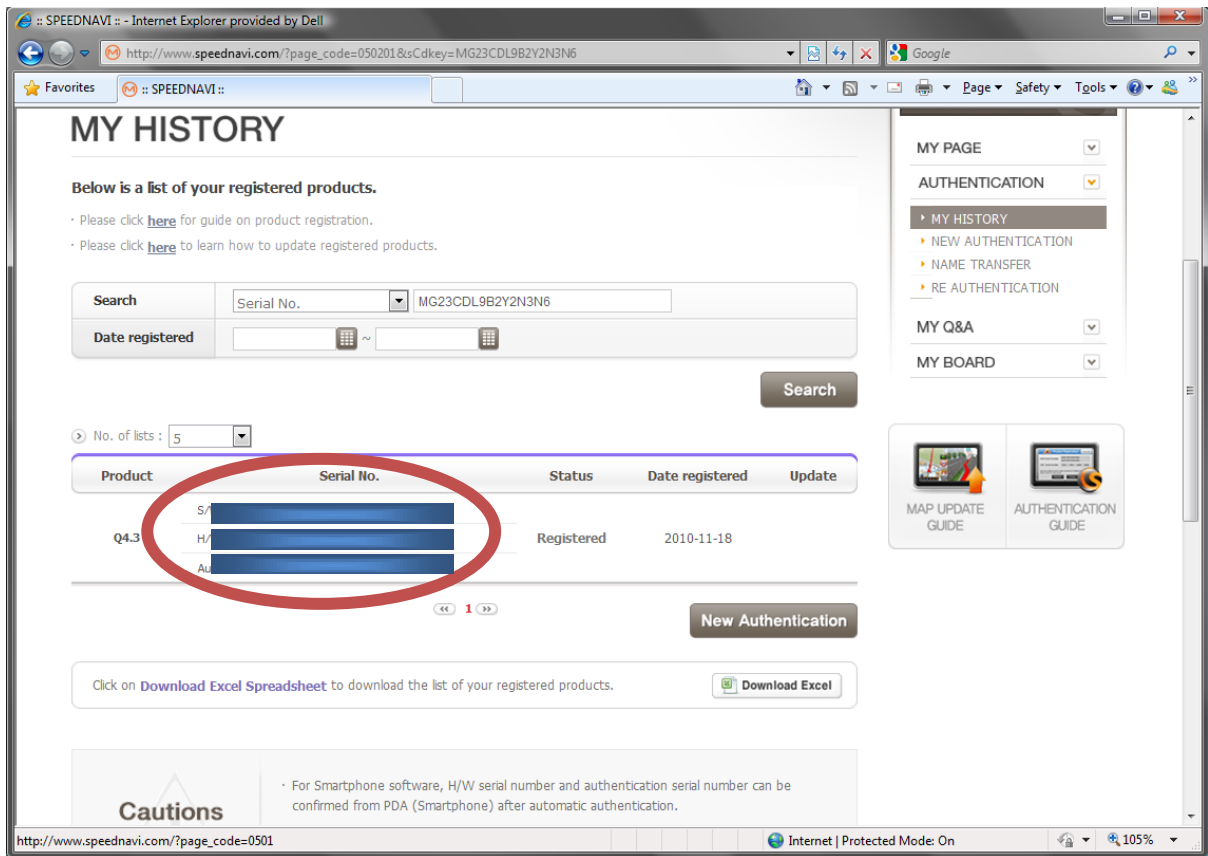

Step 11: Click “Register”. If you see the screen below, your SpeedNavi SQ™ navigation software has been successfully authenticated.

