

## Steps to Update SpeedNavi SQ™ for gogopal (Version 3.1)

**Note:** Please use Microsoft Internet Explorer.

1. Download the SpeedNavi application file from the links below:

### Gogopal Q5.0

[http://www.mapit.com.my/download/SpeedNavi/3.1.0.19/110125\\_1\\_MNSOFT\\_SpeedNaviSQ\\_V3.1\\_Malaysia\\_Singapore\\_GOGOPAL\\_Q4.3%28Map\\_Included%29.zip](http://www.mapit.com.my/download/SpeedNavi/3.1.0.19/110125_1_MNSOFT_SpeedNaviSQ_V3.1_Malaysia_Singapore_GOGOPAL_Q4.3%28Map_Included%29.zip)

### Gogopal Q4.3

[http://www.mapit.com.my/download/SpeedNavi/3.1.0.19/110125\\_1\\_MNSOFT\\_SpeedNaviSQ\\_V3.1\\_Malaysia\\_Singapore\\_GOGOPAL\\_Q4.3%28Map\\_Included%29.zip](http://www.mapit.com.my/download/SpeedNavi/3.1.0.19/110125_1_MNSOFT_SpeedNaviSQ_V3.1_Malaysia_Singapore_GOGOPAL_Q4.3%28Map_Included%29.zip)

### Gogopal M38

[http://www.mapit.com.my/download/SpeedNavi/3.1.0.19/110125\\_1\\_MNSOFT\\_SpeedNaviSQ\\_V3.1\\_Malaysia\\_Singapore\\_GOGOPAL\\_M38%28Map\\_Included%29.zip](http://www.mapit.com.my/download/SpeedNavi/3.1.0.19/110125_1_MNSOFT_SpeedNaviSQ_V3.1_Malaysia_Singapore_GOGOPAL_M38%28Map_Included%29.zip)

2. Unzip the file and copy the contents onto your SD/MicroSD card located in your gogopal device. You may either use the USB cable provided with your gogopal to transfer the files directly to the SD/MicroSD card, or use a SD card reader.

**Note 1:** If there is a previous SpeedNavi folder on your SD/MicroSD card, please back-up the whole folder in your computer. After that, you may delete the SpeedNavi folder to free up enough space on your SD/MicroSD card to copy the contents from the zip file.

**Note 2:** If you are using the gogopal M38, you may need to purchase a new SD card with at least 1gb capacity. The 512mb SD card that comes standard with your gogopal M38 is not large enough to store SpeedNavi 3.0.

3. Use **Internet Explorer** to visit <http://www.speednavi.com/?N=MY&L=EN>

**Note:** We cannot guarantee that the following steps will work if you do not use Internet Explorer. Please use Internet Explorer for maximum compatibility.


4. Login to your account by clicking the “LOGIN” button at the top right corner.






7. Click on the “FREE” button circled below.


**Note:** If you are using a gogopal M38 that is more than 1 year old, you may not have the “FREE” button in your account. Please email [customer@gogopal.com.sg](mailto:customer@gogopal.com.sg) if this occurs.

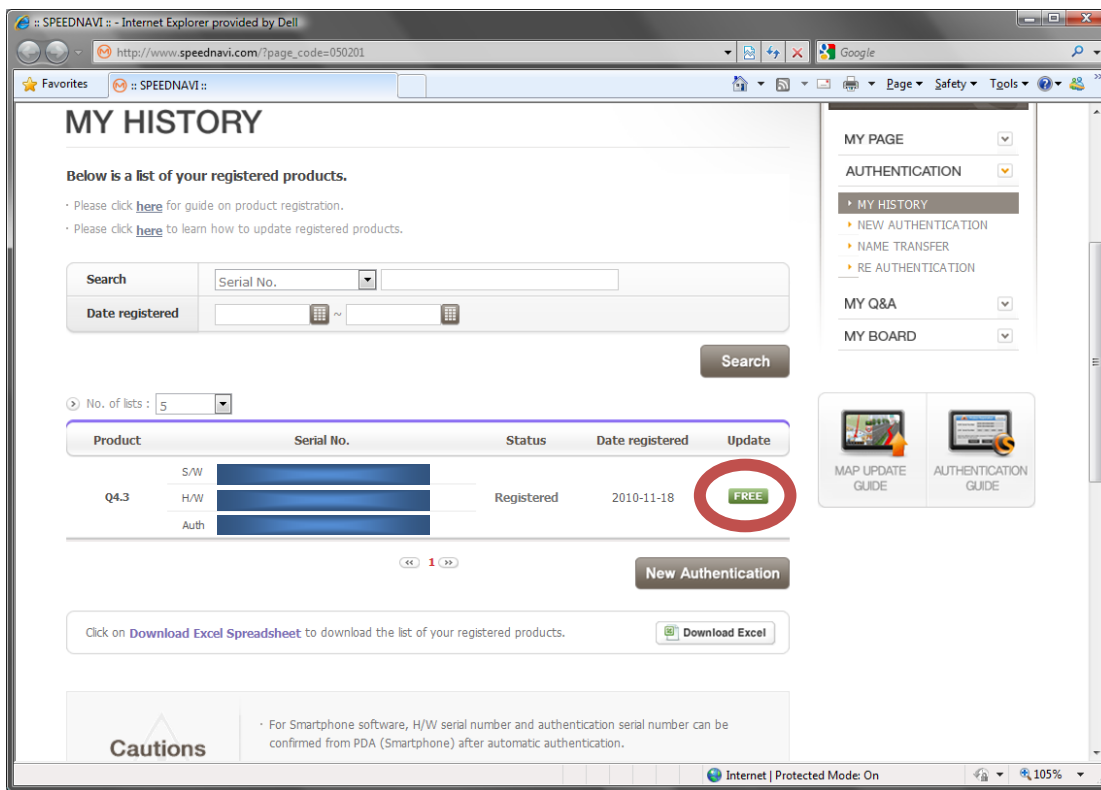



8. Click “Confirm”.

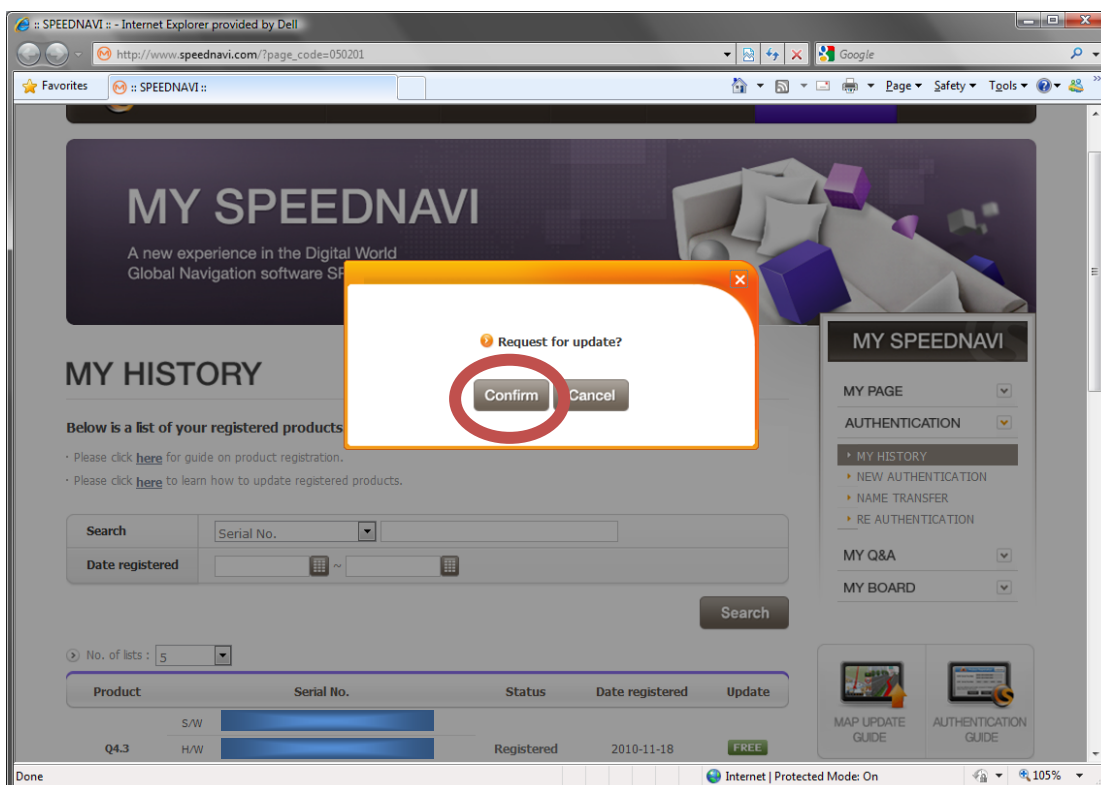

9. Click on the button circled below.

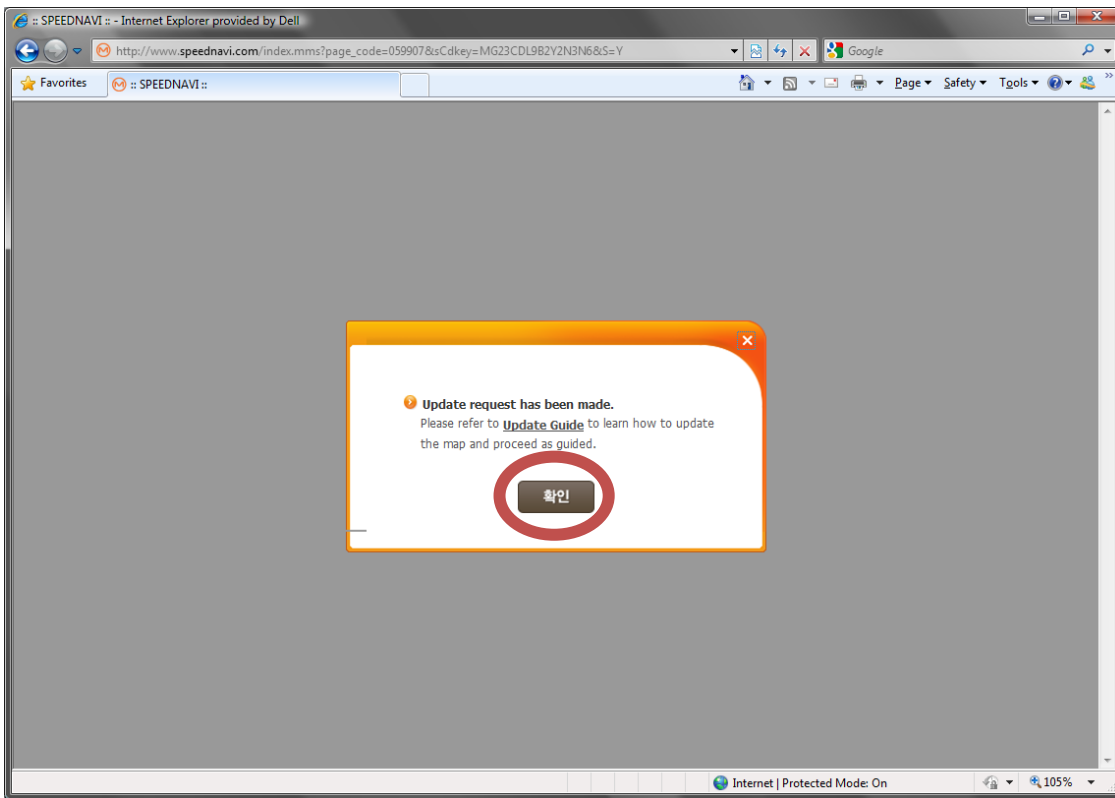

- Key in the Software serial number and the Authentication serial number into your gogopal device. (you may need to start your gogopal device and click on “Navigation”)

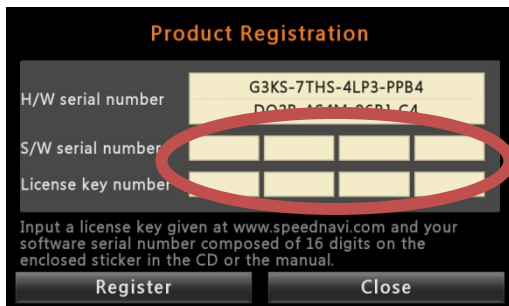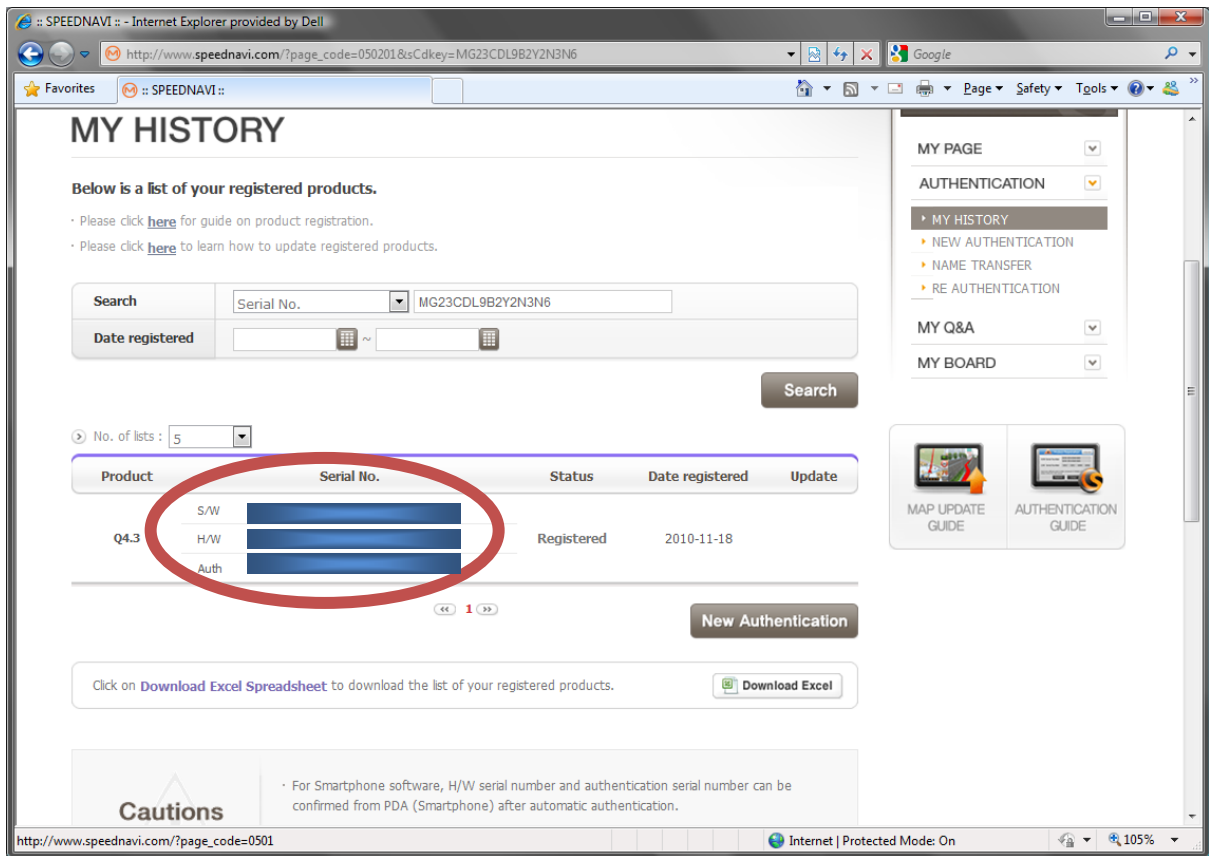

- Click “Register”. If you see the screen below, your SpeedNavi SQ™ navigation software has been successfully authenticated.

